

ATTENTION: TO INSURE SAFE AND EASY USE OF YOUR WESCO RAIS-N-ROL,
READ THESE INSTRUCTIONS BEFORE USING.

Description

The Wesco RAIS-N-ROL machinery movers are designed for safe, easy lifting and transportation of large, bulky loads.

This product is distributed by:

Wesco Industrial Products, LLC
1250 Welsh Road
North Wales, PA 19454
Tel: 215-699-7031 Fax: 215-699-3836



Contact the factory for parts information and ordering. Visit us on the web at www.wescomfg.com

Specifications

| Part # | Model # | Capacity | Lift | Weight |
|--------|-----------|-----------------|------|--------------|
| 260086 | RNR-2 | 2,000 lbs./pr. | 5" | 160 lbs./pr. |
| 260091 | RNR-2P | 2,000 lbs./pr. | 5" | 167 lbs./pr. |
| 260087 | RNR-4 | 4,000 lbs./pr. | 12" | 315 lbs./pr. |
| 260092 | RNR-4P | 4,000 lbs./pr. | 12" | 313 lbs./pr. |
| 260088 | RNR-6 | 6,000 lbs./pr. | 12" | 359 lbs./pr. |
| 260093 | RNR-6P | 6,000 lbs./pr. | 12" | 359 lbs./pr. |
| 260097 | RNR-6P-RF | 6,000 lbs./pr. | 12" | 359 lbs./pr. |
| 260138 | RNR-64 | 6,000 lbs./pr. | 12" | 359 lbs./pr. |
| 260139 | RNR-64P | 6,000 lbs./pr. | 12" | 359 lbs./pr. |
| 260089 | RNR-8 | 8,000 lbs./pr. | 6" | 480 lbs./pr. |
| 260094 | RNR-8P | 8,000 lbs./pr. | 6" | 475 lbs./pr. |
| 260090 | RNR-10 | 10,000 lbs./pr. | 6" | 480 lbs./pr. |
| 260095 | RNR-10P | 10,000 lbs./pr. | 6" | 475 lbs./pr. |

Unpacking

When unpacking the Wesco Product, check carefully for shipping damage and missing parts. If damage has occurred or any parts are missing, file a claim with the delivering carrier within 24 hours and notify the dealer from whom the unit was purchased.

Warranty Repairs

If the unit does not work properly, contact your dealer or the factory (215-699-7031) for units less than 90 days old.

Non-Warranty Service

If units are older than 90 days, repairs can be made easily on site with factory supplied parts.

NOTE: Do not send units to the factory for service without first obtaining a "Return Merchandise Authorization" (RMA) number from the customer service department. We will not be responsible for merchandise returned without proper authorization.

General Safety Information

The Wesco RAIS-N-ROLS are designed for specific functions. To insure proper use, the following instructions must be adhered to:

- (1) Load Rating: The capacity for a pair of units is shown on a metal plate attached to the top of the frame. Do not exceed load rating printed on the metal plate. Always use caution when using units at or near maximum capacity.

General Safety Information

The Wesco RAIS-N-ROLS are designed for specific functions. To insure proper use, the following instructions must be adhered to:

- (1) Load Rating: The capacity for a pair of units is shown on a metal plate attached to the top of the frame. Do not exceed load rating printed on the metal plate. Always use caution when using units at or near maximum capacity.
- (2) Units must be connected with load binders before load is lifted.
- (3) Only intended for use in pairs.
- (4) Make sure load is centered on forks.
- (5) Never move the unit unless the forks are in the lower position.
- (6) Wesco RAIS-N-ROLS are intended for movement of loads and are not intended for positioning loads in a raised position for extended periods of time. Do not leave units unattended with load in raised position.
- (7) If alterations to the RAIS-N-ROL are made Wesco will void all warranties without exceptions. User made alterations may result in unsafe conditions during use of unit.
- (8) Do not use units on inclines.
- (9) Inspect unit thoroughly, daily, before operating. Make sure that all attachments and fasteners are completely tightened.
- (10) When units are not in use, they should be completely lowered and release valve tightened.
- (11) Do not operate a damaged unit until it is completely repaired.
- (12) Always remove load before repairing.
- (13) **WARNING:** Units are unstable if handled improperly. Use caution when moving over uneven floors.

Operation

The RAIS-N-ROL is ready to use as shipped. If hydraulic jack does not operate properly, contact the dealer you purchased unit from immediately.

Warning: DO NOT ATTEMPT REPAIRS ON ANY NEW UNIT SHOULD FAILURE OCCUR. DOING SO WILL VOID THE WARRANTY.

TO POSITION:

- (1) With one foot placed securely on padded bar and both hands firmly gripping handle, position forks of first unit under load. Make sure load is centered on forks.
- (2) Faceplate (rubber) must be in contact with load. Note: A filler block may be needed as a spacer between the faceplate and load.
- (3) Position second unit in same manner as above on other end of load.
- (4) Connect the two RAIS-N-ROL units with load binders (available from Wesco).
- (5) Two people are required for moving large loads.

ATTENTION: TO INSURE SAFE AND EASY USE OF YOUR WESCO RAIS-N-ROL,
READ THESE INSTRUCTIONS BEFORE USING.

Operation (Continued)

TO LOWER:


- (1) Open jack release valve slowly on first unit until load rests on floor. repeat for second unit.
- (2) Remove load binders.
- (3) Carefully remove RAIS-N-ROL unit forks from under load. Lower forks to floor before moving units.

To Purchase Parts

A complete list of replaceable parts appears below. To **order parts** contact the factory by the phone or fax numbers shown on first page. **Ask for the Customer Service Department.**

PARTS LIST

| Item | Description | Qty Per Pair | Model No. | Model No. | Model No. | Model No. | Model No. |
|------|---------------|--------------|-----------------------|------------------------|-----------------------|------------------------|---------------------------|
| | | | Part No. RNR-2 260086 | Part No. RNR-2P 260091 | Part No. RNR-4 260087 | Part No. RNR-4P 260092 | Part No. RNR-6P-RF 260097 |
| 1 | Jack | 2 | 270429 | 270429 | 270426 | 270426 | 270427 |
| 2 | Screw | 4 | 108149 | 108149 | 108149 | 108149 | 108149 |
| 3 | Lock Washer | 4 | 100170 | 100170 | 100170 | 100170 | 100170 |
| 4 | Flat Washer | 4 | 100069 | 100069 | 100069 | 100069 | 100069 |
| 5 | Caster | 4 | 054267 | 108841 | 108834 | 108842 | 108847 |
| 6 | Carriage Bolt | 16 | 109642 | 109642 | 109637 | 109637 | 109637 |
| 7 | Flat Washer | 16 | 108201 | 108201 | 108200 | 108200 | 108200 |
| 8 | Lock Washer | 16 | 100217 | 100217 | 108228 | 108228 | 108228 |
| 9 | Hex Nut | 16 | 100642 | 100642 | 100366 | 100366 | 100366 |
| 10 | Bumper Tube | 2 | 106172 | 106172 | 106172 | 106172 | 106172 |
| 11 | Rubber Pad | 2 | 106167 | 106167 | 106167 | 106167 | 106167 |
| 12 | Jack Handle | 1 | 051717 | 051717 | 051717 | 051717 | 051717 |

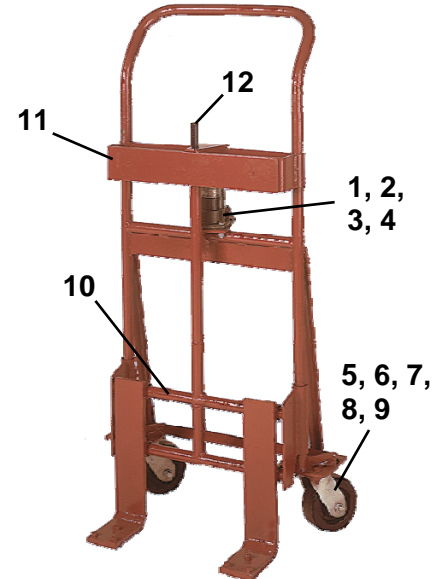

| Item | Description | Qty Per Pair | Model No. | Model No. | Model No. | Model No. | Model No. | Model No. | Model No. |
|------|---------------|--------------|-----------------------|------------------------|------------------------|-------------------------|-----------------------|------------------------|------------------------|
| | | | Part No. RNR-6 260088 | Part No. RNR-6P 260093 | Part No. RNR-64 260138 | Part No. RNR-64P 260139 | Part No. RNR-8 260089 | Part No. RNR-8P 260094 | Part No. RNR-10 260090 |
| 1 | Jack | 2 | 270426 | 270426 | 270426 | 270426 | 270427 | 270427 | 270427 |
| 2 | Screw | 4 | 108149 | 108149 | 108149 | 108149 | 108896 | 108896 | 108896 |
| 3 | Lock Washer | 4 | 100170 | 100170 | 100170 | 100170 | 100170 | 100170 | 100170 |
| 4 | Flat Washer | 4 | 100069 | 100069 | 100069 | 100069 | 100069 | 100069 | 100069 |
| 5 | Caster | 4 | 108835 | 108843 | 108835 | 108843 | 108837 | 108845 | 108845 |
| 6 | Carriage Bolt | 16 | 109637 | 109637 | 109637 | 109637 | 109637 | 109637 | 109637 |
| 7 | Flat Washer | 16 | 108200 | 108200 | 108200 | 108200 | 108200 | 108200 | 108200 |
| 8 | Lock Washer | 16 | 108228 | 108228 | 108228 | 108228 | 108228 | 108228 | 108228 |
| 9 | Hex Nut | 16 | 100366 | 100366 | 100366 | 100366 | 100366 | 100366 | 100366 |
| 10 | Bumper Tube | 2 | 106172 | 106172 | 106172 | 106172 | 106172 | 106172 | 106172 |
| 11 | Rubber Pad | 2 | 106167 | 106167 | 106167 | 106167 | 106167 | 106167 | 106167 |
| 12 | Jack Handle | 1 | 051717 | 051717 | 051717 | 051717 | 051717 | 051717 | 051717 |

LIMITED WARRANTY

WESCO INDUSTRIAL PRODUCTS (WESCO) warrants to the purchaser of this product for a period of one year from the date of purchase that this product shall be free of defects in material and/or workmanship, as follows:

1. WESCO will supply, at no charge, new or rebuilt replacements for any part that fails through a defect in material and/or workmanship during the warranty period. To obtain warranty service, you must deliver the product prepaid, to the WESCO factory.
 2. This warranty does not cover any product or product part which has been subject to accident, misuse, abuse or negligence. WESCO shall only be liable under this warranty if the product is used the manner intended by the manufacturer as specified in the written instructions furnished with this product.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. ANY EXPRESS WARRANTY NOT PROVIDED IN THIS WARRANTY DOCUMENT, AND ANY REMEDY FOR BREACH OF CONTRACT THAT, BUT FOR THIS PROVISION, MIGHT ARISE BY IMPLICATION OR OPERATION OF LAW, IS HEREBY EXCLUDED AND DISCLAIMED. UNDER NO CIRCUMSTANCES SHALL WESCO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY, EXPRESS OR IMPLIED, A BREACH OF CONTRACT OR OTHERWISE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long any implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.